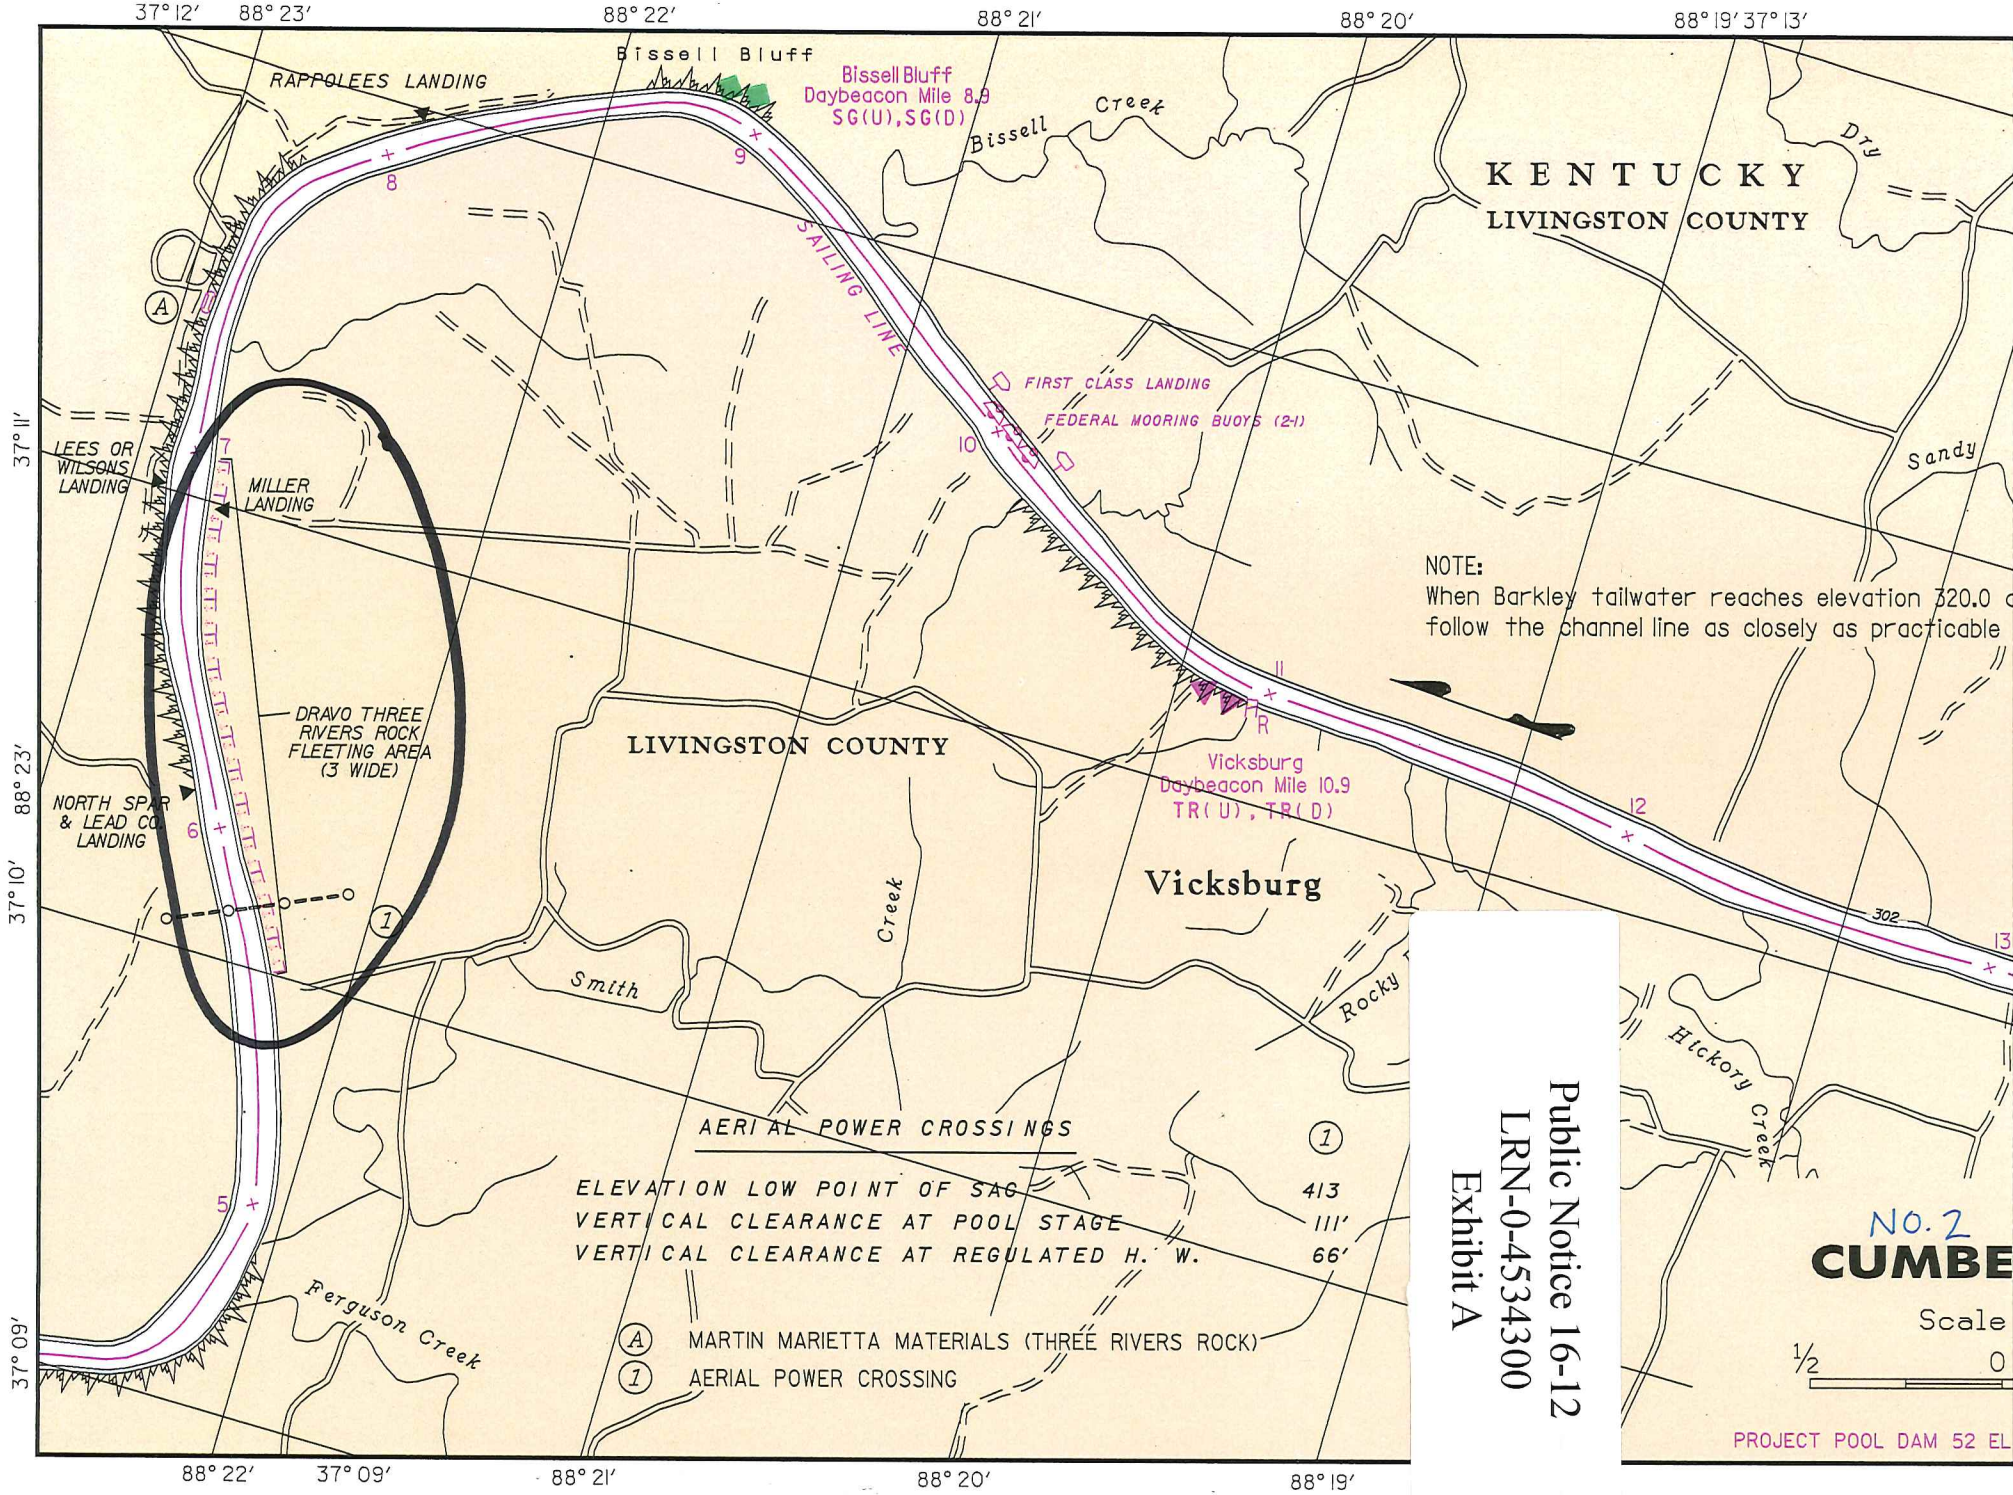

Public Notice 16-12
LRN-0-453430
Exhibit A

Public Notice 16-12
LRN-0-4534300
Exhibit B

Barge Fleet deadman installation plan

Excavate 15' deep x 10' wide x 20' long hole. Pre-assemble and place four 16" x 16" x 16' beams and anchor chain in hole as a deadman.
Assemble the four conc. beams into a block of 2 x 2. Band beams together. Place 6" x6" x 3/8" x 4 ft. angles on the four corners.
Wrap the beams with 1.5" anchor chain. Install chain hardware (shackle) to bit around the beams.
All work in and around excavated holes as per OSHA requirements.
Dig lateral trench to allow dead man fleet chain and wire to exit the concrete beam deadman at a flat angle which minimizes any lifting of the deadman.
Back fill hole and trench, re-compact as possible.

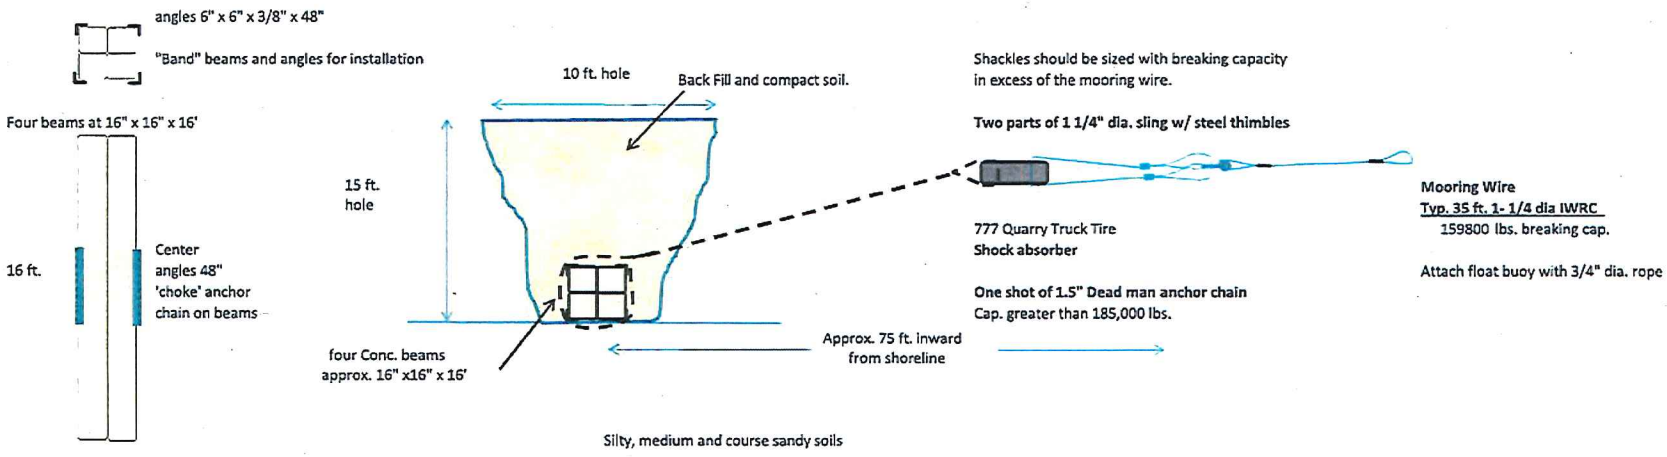

New Deadman Anchor Plans

Public Notice 16-12
LRN-0-453430
Exhibit C

Lafarge Three Rivers Quarry

Barge Fleet Deadman Installation

Manley Brothers LLC
Marine Engineering, Appraisals & Surveying
200 Benton Street
Phone. 636-225-9100
St Louis, Missouri 63088
Fax 636-225-5303

DWG 6-2015-001

date: 6-17-2015